


MANUAL

Lumary fjernstyrt varsellysbjelke med lysskilt bred last

Put the lightbox up Step 1:


Press the self-elastic latch button, let the central axis out and unlock the text display box.

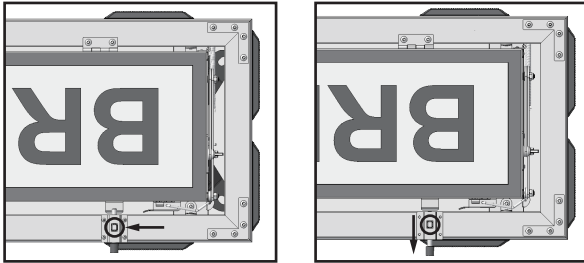

1

Put the lightbox up Step 2:


Open the text clockwise and move both sides' spring latch stuck on the supporting metal parts.

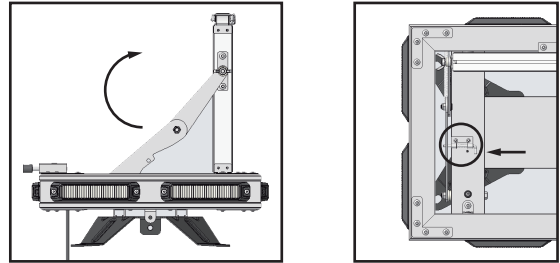

2

Letter plate changing Step 1:


Unscrew the wing nut, remove the spring washer, nylon gasket, metal supporting sheet. To open the spring buckle by pressing the side button of it.

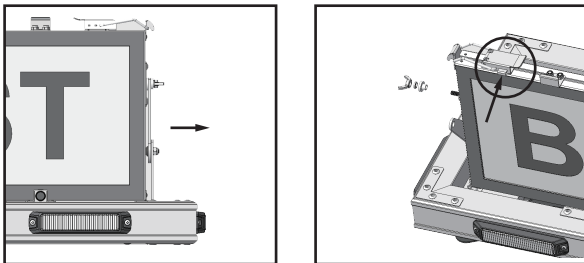

3

Letter plate changing Step 2:


Open the light box side plate, take the letter plate out and put a new one in. When the replacement is finished, put all the assembling part in position.

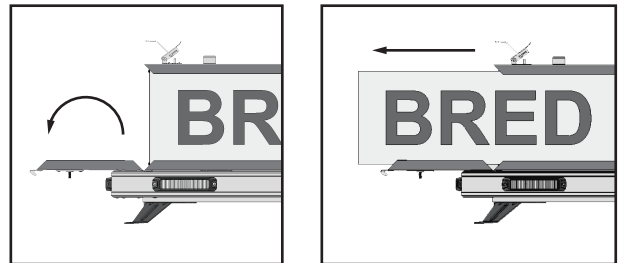

4

Light box close down Step 1:


Move the spring latches back to their original positions. Hold the lightbox by hand and low it down carefully.

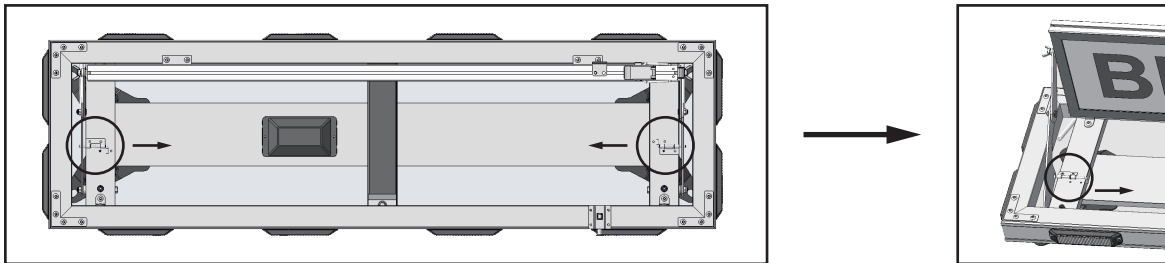

5

Light box close down Step 2:


Close the lightbox anti-clockwise until it is placed horizontally. Push the self-elastic latch handle for locking.

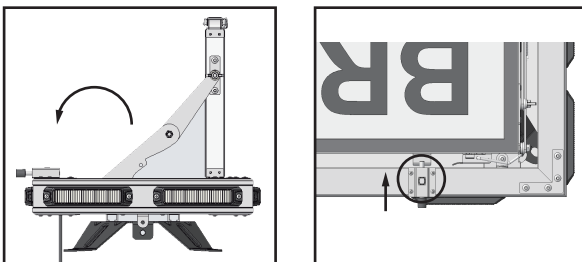

6

Bracket mounting:

Slide mounting bolts from the middle of the aluminum chute to the two sides. Place the two brackets on the bolts. Assemble the flat washer, spring washer and screw on the nut. Paste the EVA pads to the bracket feet's bottom.

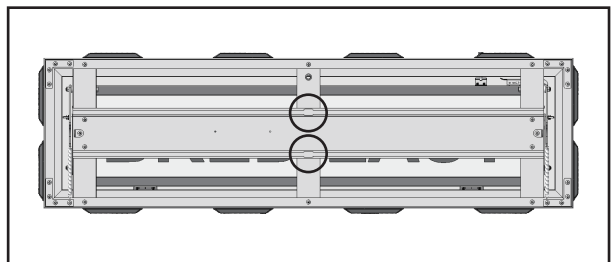

7


LUMARY

MANUAL

Lumary fjernstyrt varsellysbjelke med lysskilt bred last

Remote button arrangement and function:

NOTE: Allow a 1 second delay when pressing buttons to change the flash patterns.

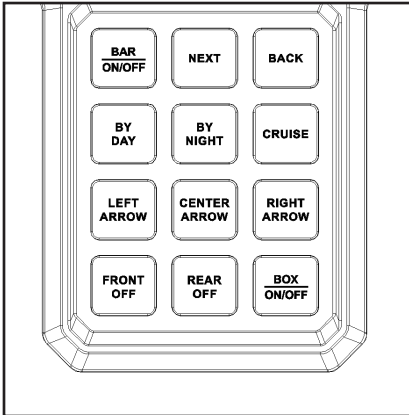

“BAR ON/OFF” is the key to turn on/turn off the lightbar.

“NEXT” is the key to switch the next flashing pattern from the 1st one to the next one.

“BACK” is the key to switch the previous flashing pattern.

“BY DAY” is the hot-key to get “BY DAY” brightness for all flashing patterns.

“BY NIGHT” is the hot-key to get “BY NIGHT” brightness for all flashing patterns.

“CRUISE” is the hot-key to get the whole lightbar’s Cruise flashing pattern and the Two Ends’(steady burn).

“LEFT ARROW” is for Left Arrow traffic advisor pattern.

“CENTER ARROW” is for Center Arrow traffic advisor pattern.

“LEFT ARROW” is for Right Arrow traffic advisor pattern.

“FRONT OFF” is key to turn off the lightbar’s front side flashing.

“REAR OFF” is key to turn off the lightbar’s rear side flashing.

“BOX ON/OFF” is the key to turn on/turn off the lightbox with text plate.

Flash patterns

Instructions:

1. NEXT and BACK button:for each pressing it will cycle the corresponding flashing patterns on the list.
2. The 6 shortcut buttons are BY DAY, BY NIGHT, LEFT ARROW, CENTER ARROW, RIGHT ARROW and CRUISE, which are not controlled by NEXT and BACK.

#	pattern
1	Single Flash
2	Double Flash
3	Strobe
4	Single pole Clockwise Rotating
5	Single pole Anti-Clockwise Rotating
6	Dual pole Clockwise Rotating
7	Dual pole Anti-Clockwise Rotating
8	Quadruple pole Clockwise Rotating
9	Quadruple pole Anti-Clockwise Rotating
10	Quadruple pole Clockwise Rotating & All Flash
11	Quadruple pole Anti-Clockwise Rotating & All Flash
12	Left&Right Half Tracking
13	Left&Right Half Back & Forward Rotating
14	Left&Right Overall Tracking
15	Center to Left&Right Tracking
16	Stacking Flash
17	Left&Right Combined Flashes(quick&slow)
18	Two Sides & Middle Flash
19	Combined half Flashes
20	Middle Triple Flash+All Triple Flash
21	Center Arrow
22	Left Arrow
23	Right Arrow
24	Cruise
25	CRUISE(2 ENDS)
26	Triple Flash
27	Quad Flash

MANUAL

Lumary fjernstyrt varsellysbjelke med lysskilt bred last

